


SAFETY CHECKLIST

- Always use protective gloves, long sleeve shirt, long pants, boots and OSHA approved protective eyewear.
- Always use the torch in a safe area, free from all combustibles and flammable liquids & vapors.
- Always have a ABC type fire extinguisher within 25ft of your work area.
- Always keep the propane gas supply cylinder in an upright position. **NEVER LAY THE PROPANE CYLINDER DOWN!**
- Never operate the torch when a gas leak is present, or gas odor is detected.

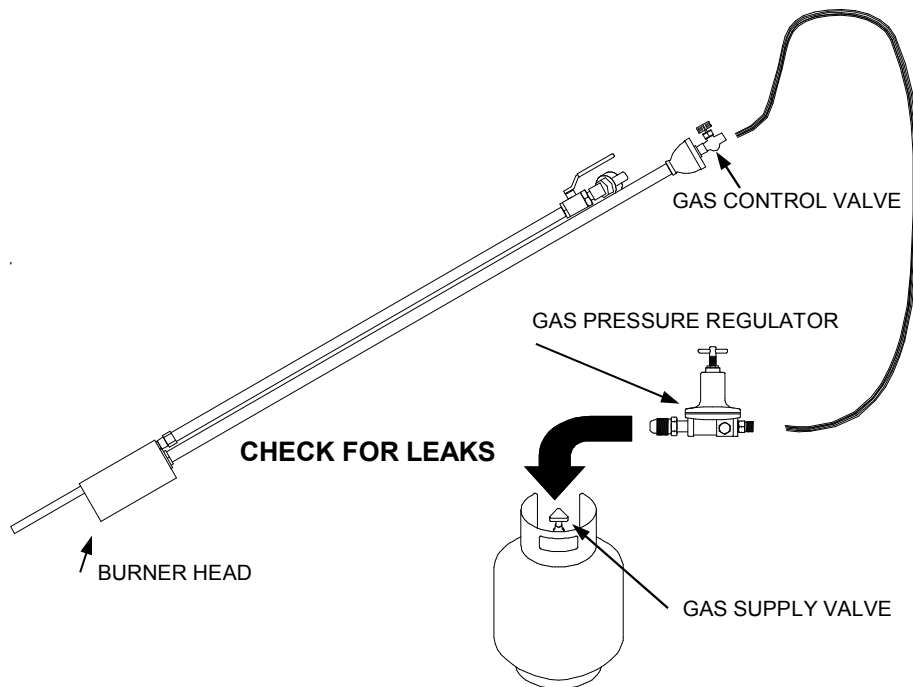

Burners, Incorporated
Milford, Michigan
(248) 676-9141
<http://www.burnersinc.com>

P.A.T. Vapor Propane Compressed Air Hand Torch

Instruction Booklet

*** * IMPORTANT * ***
*** * READ THIS FIRST * ***

**Read this manual before you use
this torch or attempting to light**

burners, inc.

Vapor Propane and Compressed Air Torch

IMPORTANT - Please read all instructions before attempting to operate this torch. Failure to follow all instructions may result in bodily injury.

FOR YOUR SAFETY

If you smell gas:

- Shut off all gas supplies.
- Extinguish all open flames.
- Contact a qualified gas service technician for assistance.

This torch will produce extremely hot flames, and will cause severe burns to exposed skin.

You must always use hand and eye protection when using this torch. It is recommended that you use OSHA approved eye protection and leather gloves whenever using this torch.

DO NOT use this torch in any area containing flammable vapors such as gasoline, paint thinner, or degreaser.

DO NOT use this torch near flammable material such as dead & dry weeds, pine needles, sawdust, & paper.

This torch is only intended for outdoor use only.

This torch is designed for use with a vapor withdrawal LPG (propane type CGA-510) cylinder only.

Only allow properly trained adults to operate this torch.

Do not allow children to operate this torch.

SET-UP INSTRUCTIONS

Before you begin ...

Inspect all material for damage. Make sure all brass connectors are free from breaks or damage. Make sure torch assembly is not bent or broken.

DO NOT USE THIS TORCH IF ANY PART IS DAMAGED OR BROKEN.

Make sure the supplied hose is securely fastened to the torch control valve assembly (refer to back cover illustration).

You must provide a LPG vapor withdrawal propane supply cylinder. This cylinder must be approved by the US Department of Transportation for propane service.

Inspect the propane gas regulator. Verify that there is no damage to either the inlet or outlet brass fitting. Verify that the adjusting handle operates freely.

Connect the CGA-510 cylinder connector fitting to LPG vapor withdrawal propane supply cylinder. (refer to back cover illustration). **DO NOT OVER TIGHTEN.**

Make sure the torch control valve is turned completely OFF (fully clockwise).

SLOWLY open the gas valve on the

propane supply cylinder. Immediately check for any gas leaks on the torch control valve, the gas hose, and the CGA-510 tank connector fitting using a soapy water or suitable gas leak detection solution (available at your local LP Gas Retailer).

DO NOT USE A MATCH OR ANY OTHER OPEN FLAME TO DETECT FOR GAS LEAKS.

DO NOT ATTEMPT TO LIGHT OR OPERATE THIS TORCH IF THERE IS ANY EVIDENCE OF A GAS LEAK, OR YOU SMELL GAS.

If a leak is discovered, immediately turn OFF the gas valve on the propane supply cylinder.

LIGHTING INSTRUCTIONS

Before you begin ...

Make sure you have followed the SET-UP INSTRUCTIONS completely.

SLOWLY open the gas valve on the propane supply cylinder. Check all connections on the torch, hose and cylinder for leaks, using a soapy water solution or a suitable gas leak detection solution (available from your local LP gas supplier). Watch all connections carefully. If bubbles appear, a leak is present in that area. Shut OFF the gas supply valve on the propane supply cylinder. **DO NOT OPERATE, OR ATTEMPT TO LIGHT THE TORCH WHEN A LEAK IS PRESENT.**

Open the gas control valve on the torch 1/8 turn, or until a small amount of gas begins to escape from the torch. Using the flint striker supplied with this kit, ignite the gas at the burner head end of the torch.

NEVER USE A MATCH OR CIGA-

RETTE LIGHTER TO IGNITE THE GAS. This can lead to serious burns and injury. **DO NOT ATTEMPT TO IGNITE THE GAS FOR MORE THAN FIVE (5) SECONDS.** If you can not light the torch within 5 seconds, turn OFF both the gas control valve on the torch and the gas supply valve on the propane supply cylinder.

Adjust the size of the flame by using the gas control valve on the torch.

IMPORTANT PERFORMANCE NOTE

The propane gas regulator controls the amount of pressure delivered to the PAT torch. To increase delivery pressure, and flame intensity, slowly turn the adjusting handle clockwise. To decrease delivery pressure, and decrease flame intensity, turn the adjusting handle counter-clockwise.

The high pressure compressed air injector uses a standard 1/4 turn quick connector. **DO NOT EXCEED 120 psi AIR DELIVERY PRESSURE.**

Insert the air injector tip into the crack. Slowly open the air supply valve until a suitable amount of air is being injected into the crack.

If your torch is not performing at a normal level, have your local propane supplier verify that your propane supply cylinder is operating correctly.

SHUT-OFF INSTRUCTIONS

Turn OFF the valve on the gas supply cylinder first. Allow all of the gas to burn completely and the flame to extinguish at the burner head.

Turn OFF the gas control valve on the torch and the compressed air source before disconnecting hoses.